
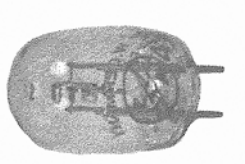 
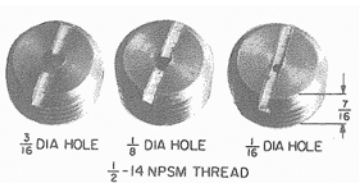 
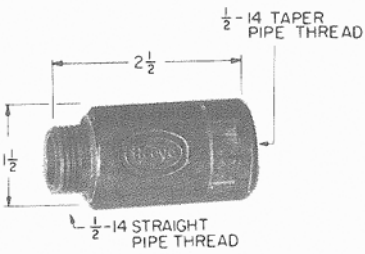 
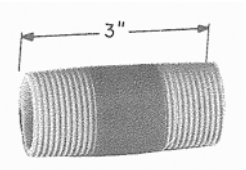 


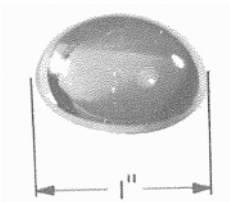 
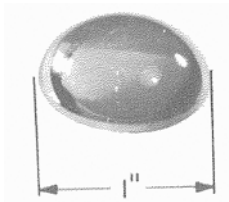 


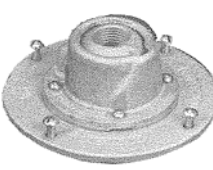 
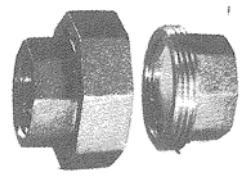 

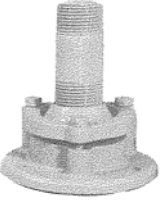 
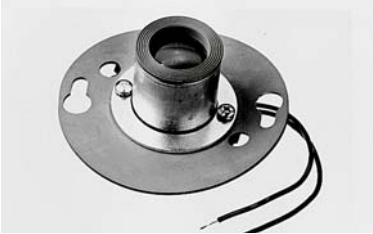 
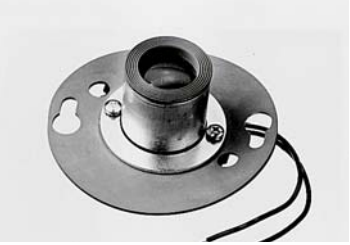 
 
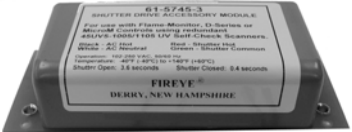 


ACCESSORIES FOR FIREYE PRODUCTS

<p>4-263-1</p>  <p>Firetron Cell for 48PT2 Infrared Scanner. C-Series, D-Series and Flame-Monitor.</p>	<p>4-314-1</p>  <p>Ultraviolet Tube for use in 45UV5-1005, -1009, 45UV2, 45UV3-1050, C-Series, D-Series and Flame-Monitor controls.</p>	<p>10-88</p>  <p>Set of 3 Orifice Plugs. Drilled 1/16", 1/8", 3/16", 1/2". Pipe Thread. Also available: 10-15, Blank orifice plug for drilling to any size required. For use with UV1A Scanner</p>
<p>35-69</p>  <p>Heat Insulator. Reduces conduction of heat from sight pipe to scanner. Used with 48PT1, 48PT2, UV-1A. 1/2" pipe connection.</p>	<p>35-127-1 (NPT) 35-127-3 (BSP)</p>  <p>Heating insulating nipples (Epoxyglass) for use with 45UV2, 45UV5. 1-inch pipe size, male both ends. Used to reduce conduction of heat from scanner mount to scanner.</p>	<p>38-96</p>  <p>Flame Meter, 2 1/4" square, 4-20ma</p>

<p>38-97</p>  <p>Flame-Monitor E100 Mounting Screw</p>	<p>46-38</p>  <p>Quartz Lens for use in 45UV5-1005, -1006, -1007, 1008, and -1009 scanners.</p>	<p>46-56</p>  <p>Quartz Lens. Used with 45UV3 to increase scanner sensitivity. Replaces quartz window in scanner.</p>
<p>48-1805 Flame-Monitor E100 Mounting Screw</p>  <p>48-1836 Flame-Monitor E110 Mounting Screw</p> 	<p>60-302</p>  <p>Swivel Mounting Adapter. Simplifies scanner sighting. Used with 48PT1, 48PT2 and UV1A. 1/2" pipe connection.</p>	<p>60-801</p>  <p>Sealing union with pyrex window. Seals scanner sight pipe against excessive fire-box pressure. Used with 48PT1, 48PT2, 1/2" pipe connection.</p>

<p>60-1199-1,2</p>  <p>Sealing coupling with quartz window. Seals scanner sight pipe against excessive firebox pressure. 1" pipe thread. Used with 45UV1, 45UV2, 45UV3, 45UV5. 60-1199-1 (NPT), 60-1199-2 (BSP)</p>	<p>60-1257, 60-1290</p>  <p>Sealing union with quartz window (60-1257). 60-1290 has quartz lens to increase scanner sensitivity. For use with UV1A/UV1B scanners.</p>	<p>60-1664-3 (NPT) 60-1664-4 (BSP)</p>  <p>Scanner swivel mount for use with 45UV2, 45UV3, 45UV5. Simplifies scanner sighting.</p>
<p>61-2914-1</p> 	<p>61-3263-1</p>  <p>Shutter, Bracket, and Lens Assembly for 45UV5-1005 thru -1009.</p>	<p>61-436</p>  <p>Lens Cap (standard). Replacement for all 48PT1 and 48PT2 models.</p>
<p>61-5745-3</p>  <p>External shutter drive circuit board for dual 45UV5-1005 scanners.</p>	<p>82-95</p>  <p>Lens holder for 45UV2, 45UV5 and 45RM1/2</p>	